Before you begin, read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

Kit Components:

Qty.	Part Description	Tools required for installation:
1	Windshield	T-25 Torx Screw Driver
4	#14 X 1/2", Black	P3 Phillips Screw Driver

- **Only 12130 and 12140 require screws**



NOTE: Arctic Cat # **8639-148** is required to install the Mid and Tall height Cobra windshields.

INSTALLATION INSTRUCTIONS


1. Remove the stock bezel. There are two T-25 torx head screws securing the bezel. **See Photo 1.**


2. Next, remove the stock windshield. There are four T-25 torx screws securing the windshield.

3. Once the stock windshield is removed you can start to install the Cobra windshield. You will re-use the four T-25 torx screws used to secure the OEM windsheild.

4. Start by installing the two side screws first, then proceed to the front screws. **See Photos 2 & 3 Below.**

5. If you are installing the low catalyst windshield, Re-install the bezel and you are complete. Otherwise, proceed to the next step.

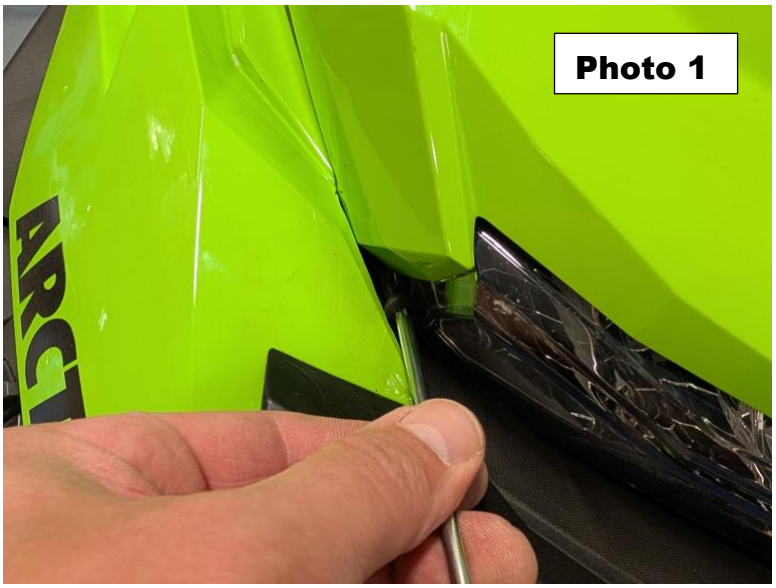

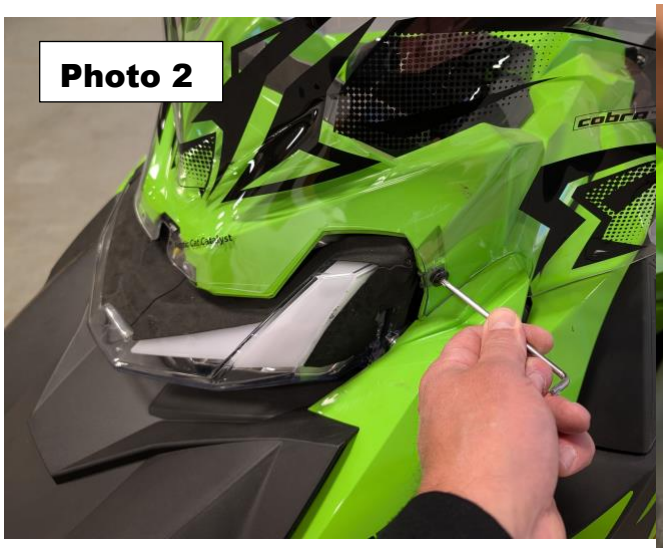



NOTE: Arctic Cat # **8639-148** is required to install the Mid and Tall height Cobra windshields.

 © PowerMadd


6. If you are installing the Mid or the Tall version you will need to purchase Arctic Cat # **8639-148** to secure the rear mounting holes of the Cobra windshield. This kit is also required to install the OEM shields.

7. Follow the instructions included with the mounting hardware to install the Mid and Tall windshield mounting kit. You will need to lift the body panel to slide the mounting bracket (8639-148) in place. **See Photo 4.** Repeat for both sides.

8. Once the tall windshield mounting kit is installed you can secure the rear mounting holes with the four Phillips head screws included with the Cobra windshield. **See Photo 5.**

9. Finally, re-install the front bezel and be sure the bezel tab is inserted correctly in to the slot in the headlight.

NOTE: Periodically check all screws for tightness.

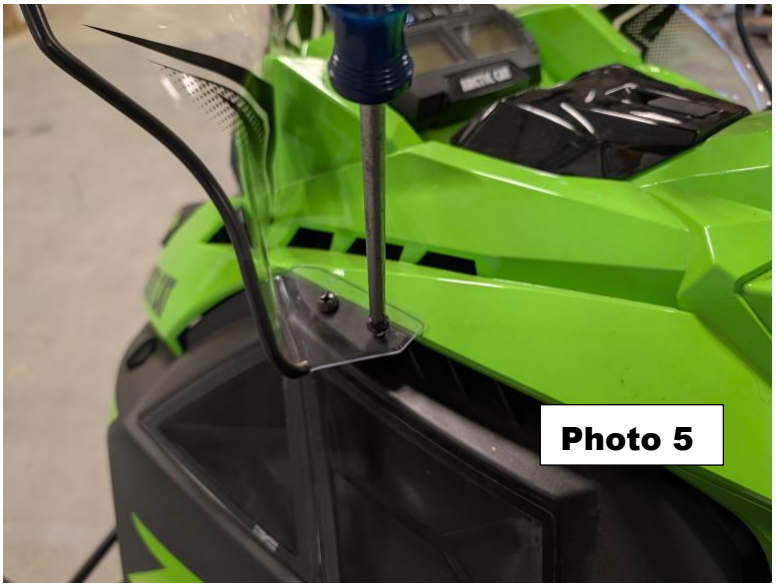

LIMITED WARRANTY

POWERMADD warrants this product to be free from defects in material and workmanship under use for the purpose it was intended. **POWERMADD** shall not be liable for damage or injury caused by defective materials or workmanship. **POWERMADD** may elect to repair or replace this product, but is the sole judge of any defects in their product. This warranty does not cover any labor costs to remove or reinstall this product and is effect for one year from the original purchase date.